

20 Loader Model

Parts Sheet



1 – 10' Main Frame
2 – 5' wings
2 – Loader brackets
4 – Pins
8 – Muffler clamps
4 – large hair pins

8 – 3" Round u-bolts
12 – 2" square u-bolts
40 – 3/8" flange nuts
2 – 1/2 x 3 1/2 bolts
2 – 1/2 lock nuts




20' Loader Model Wick Weeder Instruction Sheet

First bolt the 5' wings onto the 10' main with the $\frac{1}{2}$ " x 3 $\frac{1}{2}$ " bolts & $\frac{1}{2}$ " lock nuts.

Your muffler clamps are mounted to the underside of the tubing with 2" u-bolts and $\frac{3}{8}$ " flange nuts. Place them 4" in from the ends and on the main 10' section place them 4" in from the centre point.

Your brackets for the loader are bolted on where you need them.

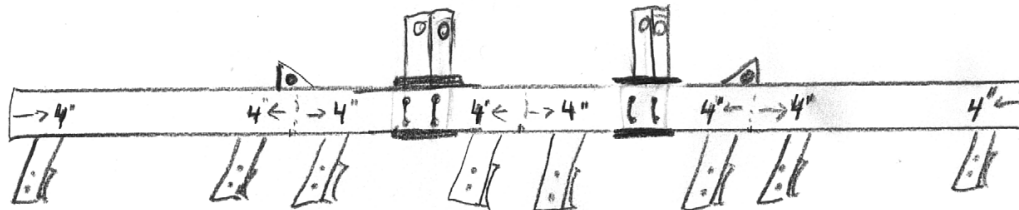

Now you are ready to mount the wick tubes with the 3" round u-bolts. Slip the u-bolt over the wick tube beside the end cap and then slide the u-bolt into the muffler clamp. When fastening be sure not to over tighten, it should be snug but the pipe should not indent. Make sure that the fill cap is at the top of the tube and that the ropes face straight ahead. (Do not mount the tube with the ropes facing straight down toward the ground, this puts too much pressure on the ropes when the wick tubes are full, and they will leak.)

To fold for transport just flip the 5' wing over, onto the 10' main frame.

